




Manual Double A-Arm for RC28







Spring Stiffness Classifica tion Table

Washer Selection Guide Table

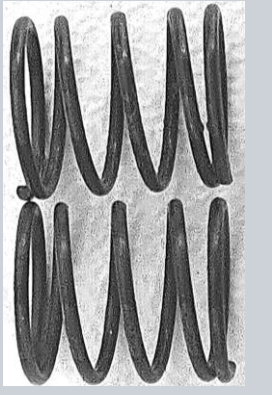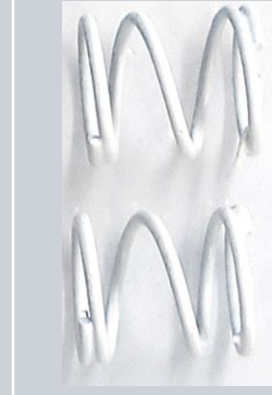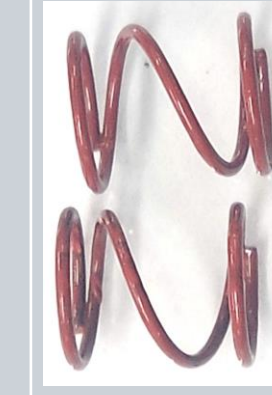Extra Soft	Soft	Medium	Hard	Extra Hard
				

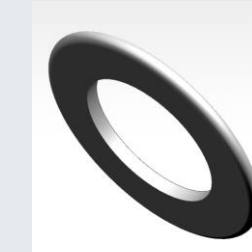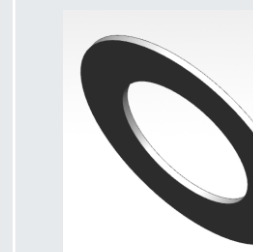
Camber 0	Camber -0.5	Camber -1	Camber -1.5
Washer 0.4	Washer 0.3	Washer 0.2	Washer 0.1
			

How to change the degree angle camber


Similarly, install the washer 0.3 and 0.1 to achieve camber angles of -0.5° and -1.5°




Washer 0.2
Camber -1°

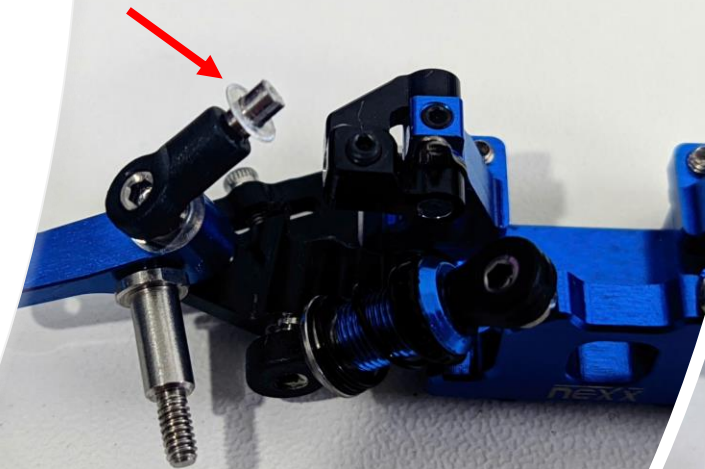


Washer 0.4
Camber 0°

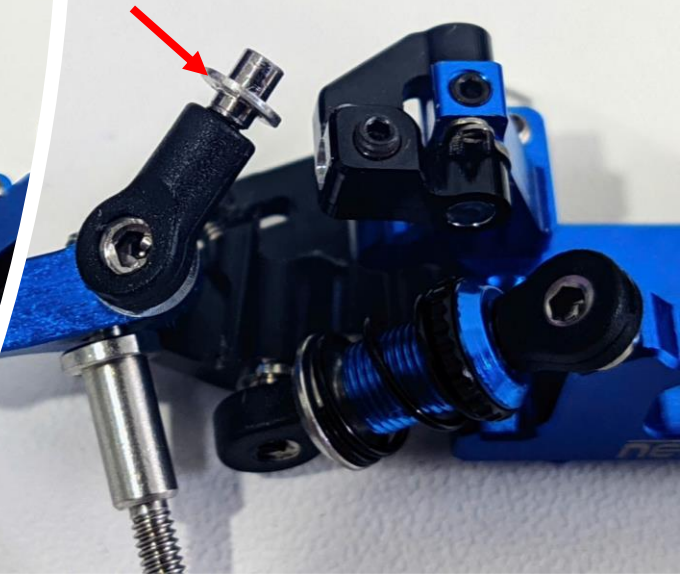


How to change the degree angle **Caster**

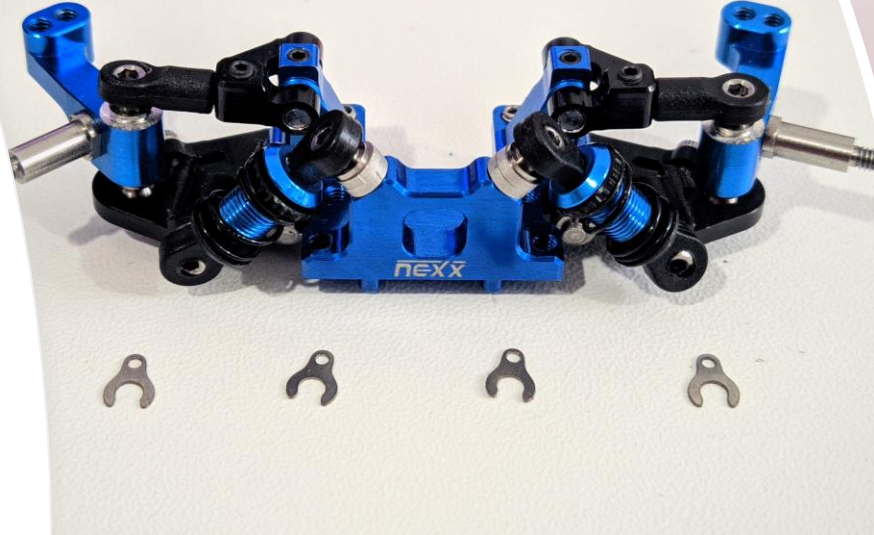

Caster: 0°, Front: 2 × 0.25mm shims

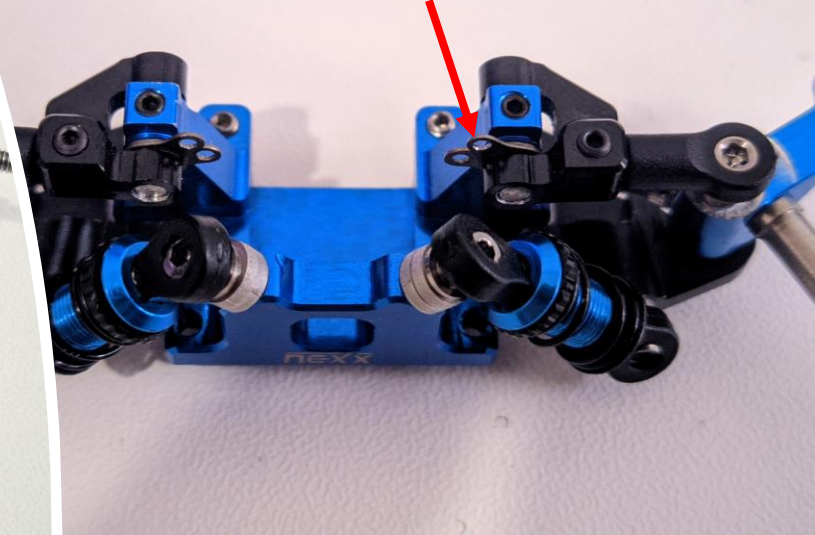

Caster: 2.6°, Rear: 2 × 0.25mm shims

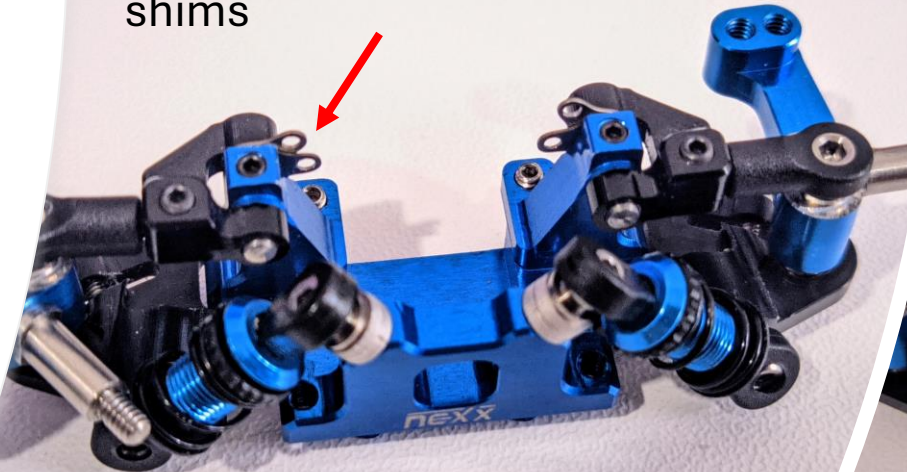

Caster: 1.3°,
Front: 1×0.25mm shim,
Rear: 1×0.25mm shim

